


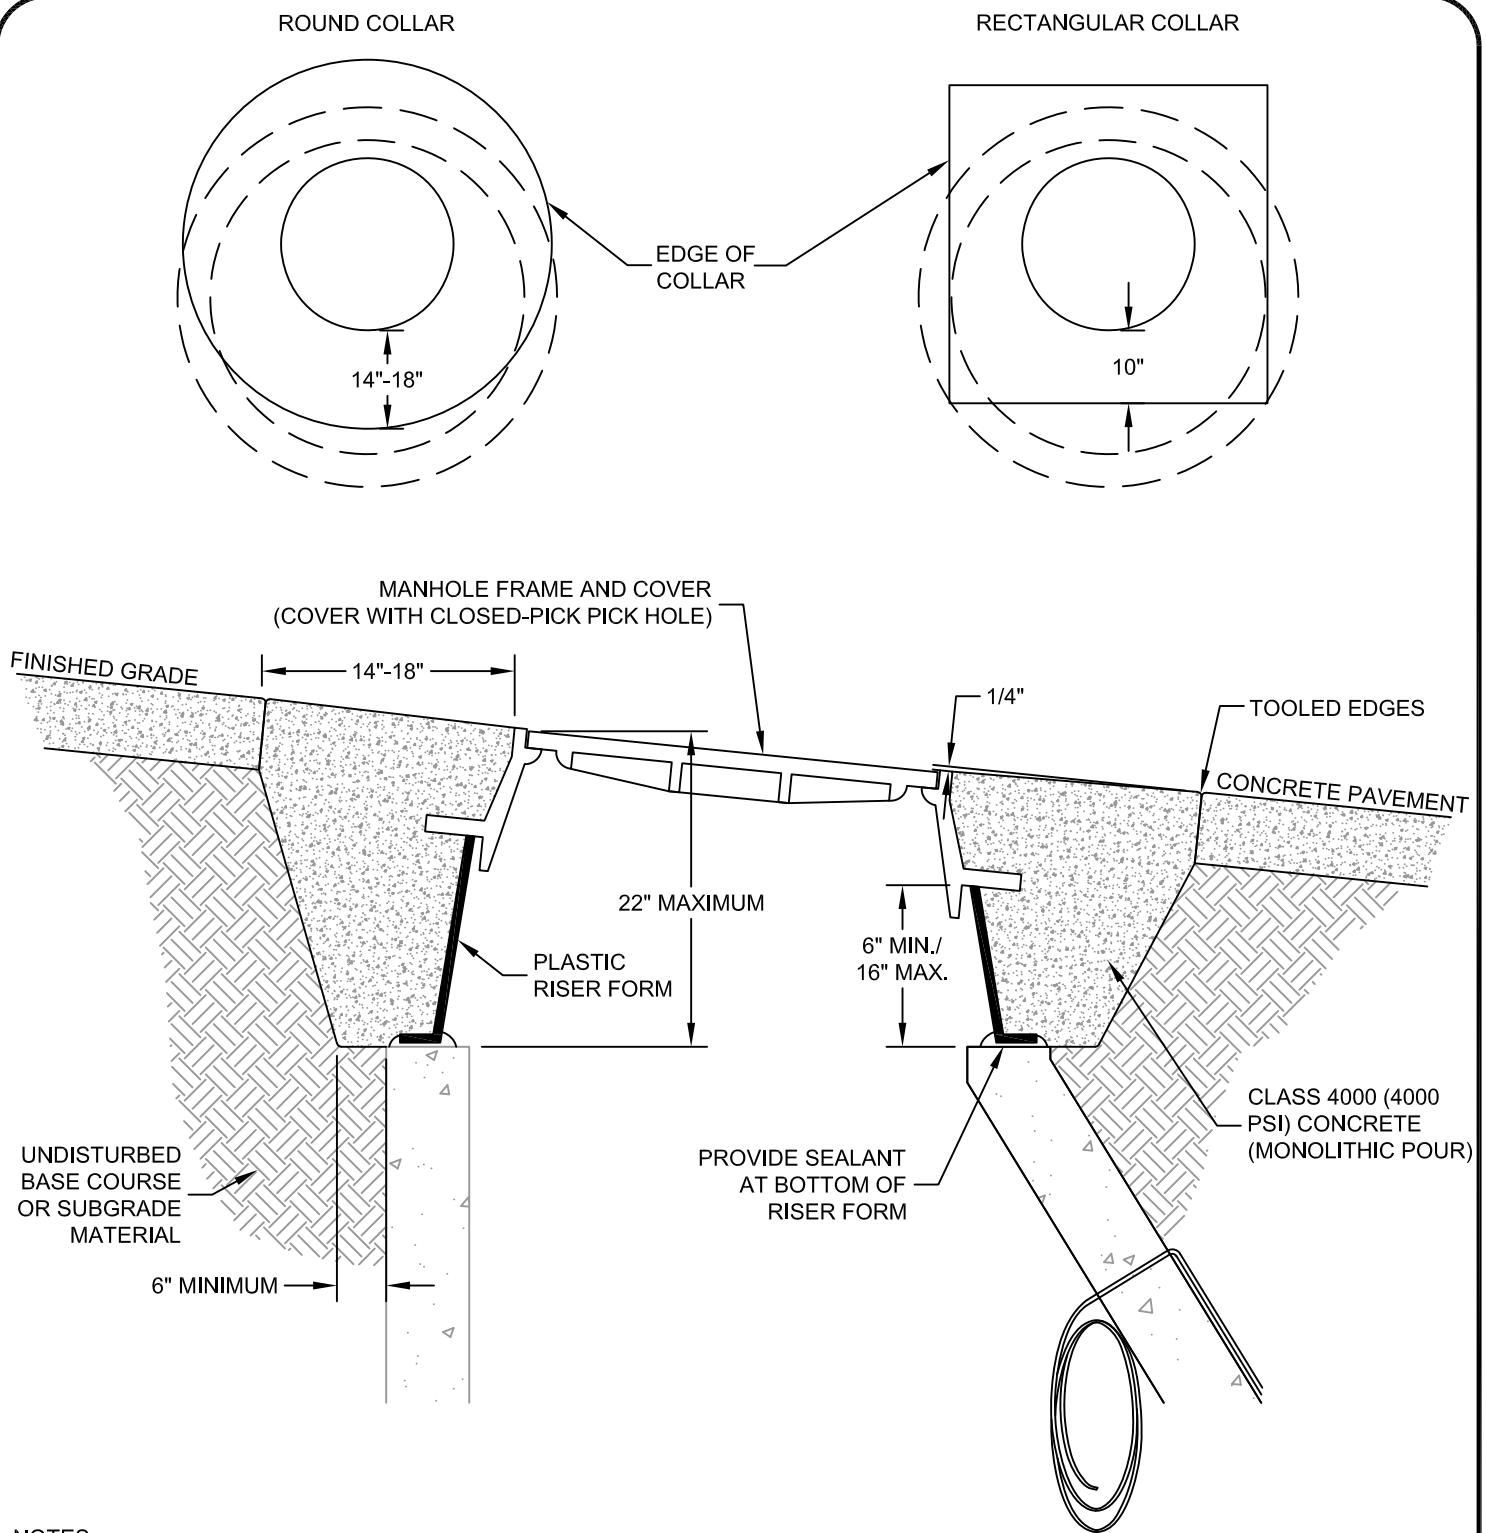

NOTES:

1. MANHOLE ADJUSTMENT SHALL OCCUR AFTER PLACEMENT OF CONCRETE PAVEMENT.
2. INSTALL TEMPORARY PLYWOOD FLOORS IN EXISTING MANHOLES PRIOR TO CONSTRUCTION.
3. BLOCK OUT AREA AROUND MANHOLE ADEQUATE TO ALLOW FOR MANHOLE ADJUSTMENT.
4. DIMENSIONS OF PLASTIC RISER FORM SHALL BE SPECIFIC TO THE DIAMETERS OF THE MANHOLE FRAME AND CONE AND OF THE ADJUSTMENT HEIGHT.
5. PLASTIC RISER FORM SHALL BE TRIMMED TO MATCH SLOPE OF PAVEMENT AND ALLOW FOR INDICATED DIMENSIONS BELOW FINISHED GRADE.
6. A WATER TIGHT SEAL BETWEEN THE TOP OF CONE AND THE PLASTIC RISER FORM SHALL BE PROVIDED WITH SEALANT. SEALANT SHALL CONSIST OF A CONTINUOUS BEAD THAT COVERS THE ENTIRE WIDTH OF THE BOTTOM FLANGE OF THE PLASTIC RISER FORM. TOP OF MANHOLE CONE SHALL BE CLEAN PRIOR TO PLACEMENT OF SEALANT.
7. CONSOLIDATE CONCRETE TO ELIMINATE ALL VOIDS.
8. MANHOLE FRAMES PLACED IN CONCRETE SIDEWALKS SHALL BE FLUSH WITH SIDEWALK.



**Snyder Basin Water
Reclamation District**

MANHOLE ADJUSTMENT IN CONCRETE PAVEMENT

STANDARD DETAIL

MH-08

Revision Date: 2/23/26